



## TP-N-751

### VIVE Comfort

1111 S. Glenstone Ave., Suite 2-100  
Springfield, MO 65804

Toll-Free: 1-800-776-1635 Web: [www.vivecomfort.com](http://www.vivecomfort.com)

Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Filter Change Reminder	4
Warranty Registration	5




#### Caution:

#### Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

## Getting to know your thermostat

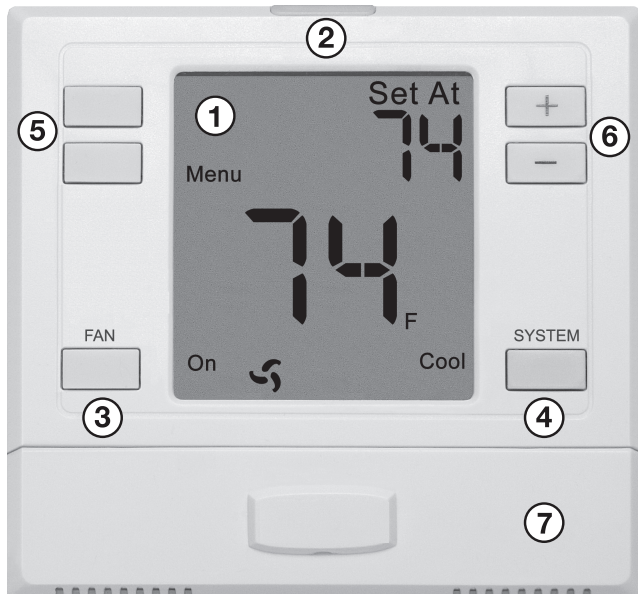

- ① LCD (to the right)
- ② Light Button (Glow in the Dark)
- ③ Fan Button
- ④ System Button
- ⑤ Menu Buttons
- ⑥ Temperature Setpoint Buttons
- ⑦ Battery Door

**Menu Options:** Shows different options

**Low Battery Indicator:** Replace batteries when this indicator is shown.

Displays the user selectable setpoint temperature.

+1 will appear in the display when second stage of heat or cool is on. +2 will appear for third stage of heat.

**System:** Selects heat, off or cool as needed.

Indicates the current room temperature.

**COOL HEAT FAN**

The **COOL**, **HEAT** or **FAN** icon will display when the **COOL**, **HEAT** or **FAN** is on. **NOTE:** The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.




### Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable. The batteries are located on the front of the thermostat.

## Battery information

Open the battery door on the front of the thermostat and insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

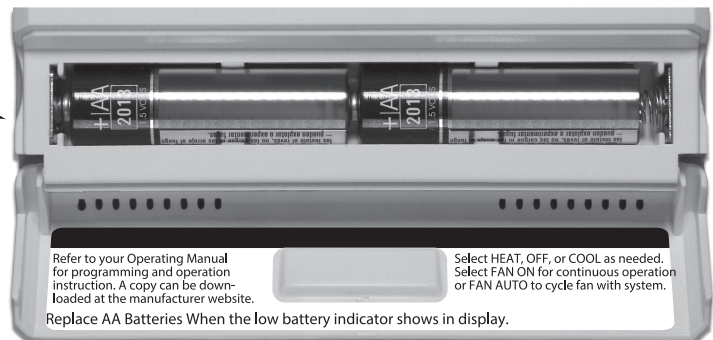


## Easy to use controls

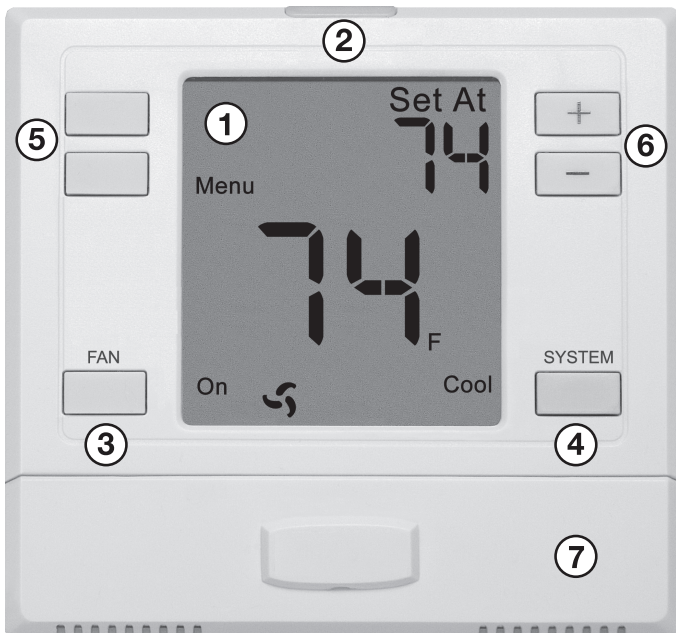

### Caution:



When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- 1 LCD Display:**  
See page 2 for details about this display read out and icons.
- 2 Glow in the Dark Light Button:**  
The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.
- 3 Fan Button:**  
Select **ON** or **AUTO**. The **ON** key will run the fan continuously. The **AUTO** key will cycle the fan on only when the heating or cooling system is on.
- 4 System Button:**  
Selects the operation mode of your **HVAC** system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. (**EM Heat** will appear as an option if operating a heat pump. **EM Heat** setting will turn on Emergency Heat.)
- 5 Menu Buttons:**  
The menu buttons are only used by installing technicians to customize the thermostat for your heating and cooling system
- 6 Temperature Setpoint Buttons:**  
Press the + or - buttons to select the desired room temperature.
- 7 Battery Door:**  
Access door to change the batteries.


## Filter Change Reminder

---

If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see **FILT** in the display when your air filter needs changed. **FILT** will be shown in the display after your system has run long enough to require an air filter change.

### Resetting the filter change reminder:

When **FILT** reminder is displayed, you should change your air filter and reset the reminder by holding down the **FAN** button for 3 seconds.

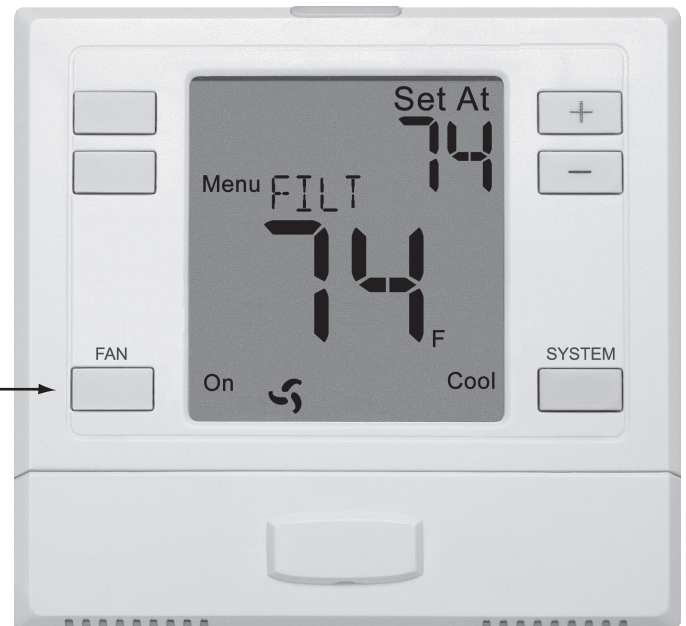



**Warranty Registration:**

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

① Go to our website, and fill out a short registration form online.

- or -

② Complete the form below and mail it to the address shown.

---

**Warranty Registration:**

**Name:** \_\_\_\_\_

**Thermostat Model:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Date Installed:** \_\_\_\_\_

**City:** \_\_\_\_\_

**Complete form and mail to:**

**Thermostat Warranty Registration**

**State:** \_\_\_\_\_

1111 S. Glenstone

**Zip:** \_\_\_\_\_

Suite 2-100

Springfield, MO 65804